
GROUND CONTROL SYSTEMS® Wedge Anchor Kit (WAK) Installation Instructions

TOOLS NEEDED FOR INSTALLATION


- 1. Safety glasses and ear plugs
- 2. 3/8" Hammer Drill with 3/8" bit
- 3. Hammer
- 4. Torque wrench
- 5. Small vacuum or wire brush


NOTE: These instructions are for installation of wedge anchors in CONCRETE ONLY.


CAUTION: Be sure to wear eye and ear protection when drilling holes.

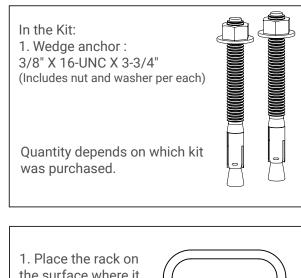


the surface where it is to be mounted, checking for set backs to walls, curbs, pedestrian walkways and wheelchair accessible areas.

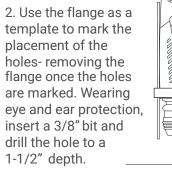


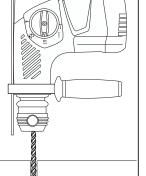

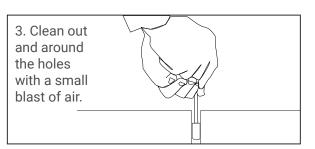

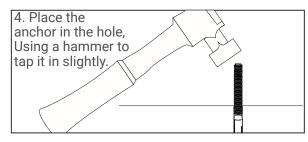

5. Place the rack over the anchor and tap firmly with a hammer. leaving about 1/2" of thread showing. 0





For questions or concerns regarding installation using wedge anchors, please call Ground Control at 800-630-7225 or email us at info@groundcontrolsystems.com

A short demonstration video on how to install this type of anchor can be found in our video library.

These installation instructions are intended for the install of wedge anchors in concrete only. For instructions on installing a bike rack in asphalt, please contact Ground Control or download our asphalt installation instructions from our website.

The information contained in this document is the sole property of Ground Control Systems® any reproduction in part or whole without the written permission of Ground Control Systems® is prohibited.



www.groundcontrolsystems.com info@groundcontrolsystems.com 800-630-7225